 




FORMATTING MICCA MEDIA PLAYERS

Micca players will play a loop of either videos or images, but NOT BOTH.
If you have a mixture of videos and images, we suggest creating a video slideshow of the images in Premiere.
Videos should be MP4 files with H.264 codec, images should be JPG.
USB drive or SD card should be formatted as MS-DOS (FAT).

In Premiere, export your video as an MP4.
Under "Format," select H.264.
If the "Match Sequence Settings" box is checked, uncheck it.

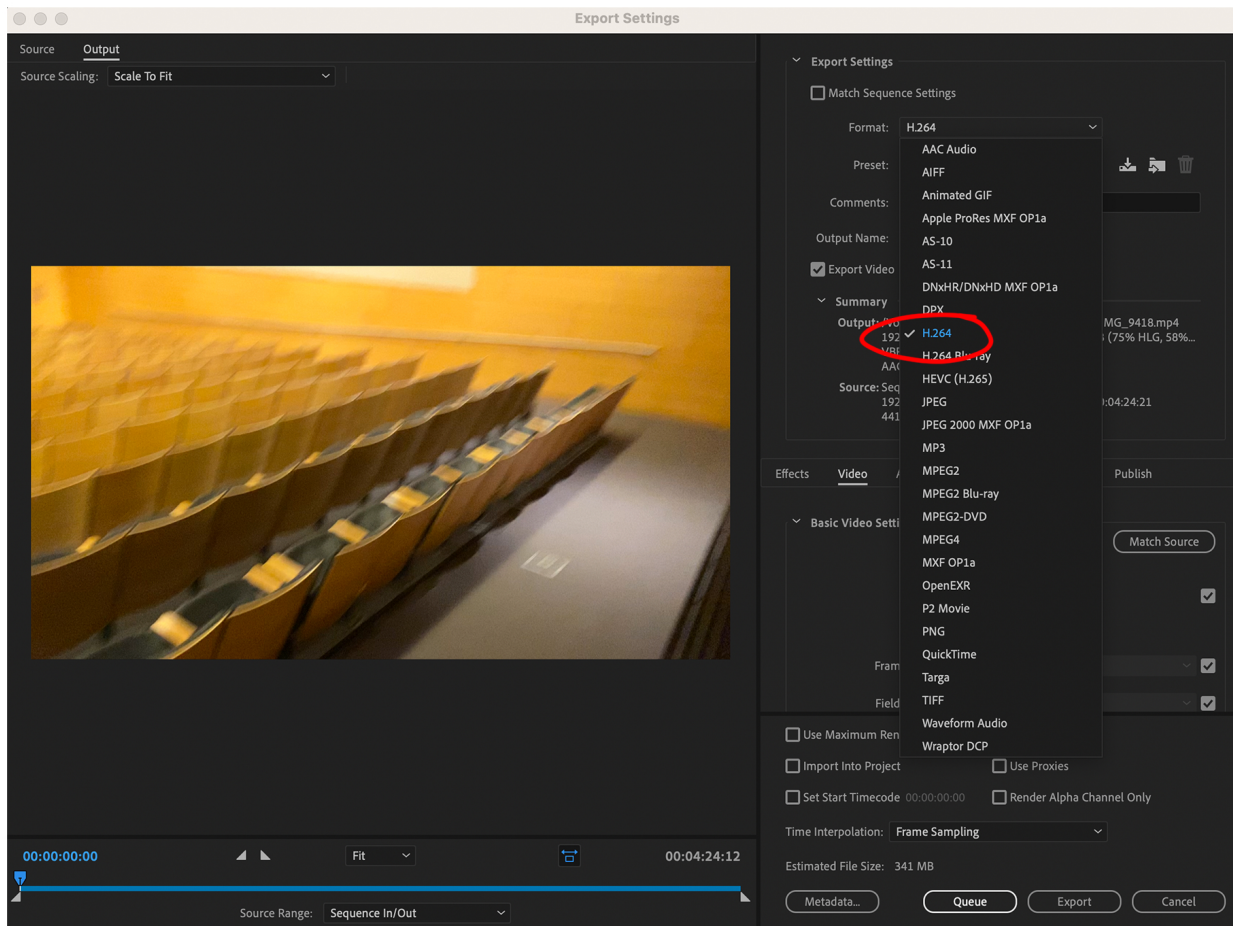

  To format your USB drive:
Open Disk Utility and select your drive.
Select "Erase"
Select "MS-DOS (FAT)"
Click "Erase"

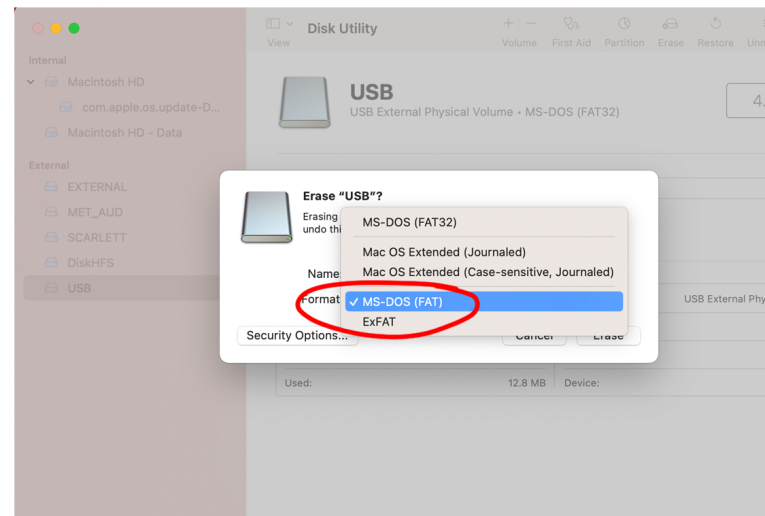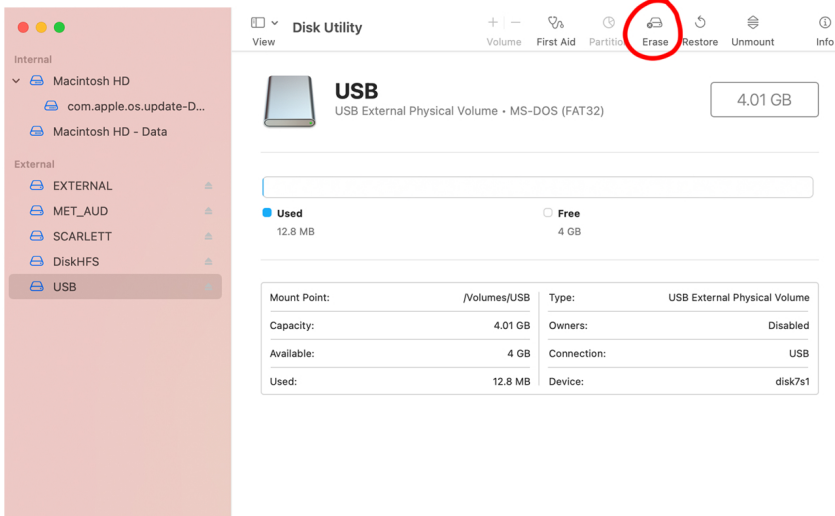



Videos



This is the main menu screen where you will locate your files.
If playing videos, select "Movie." For still images, select "Photos."
The "Files" option lets you see all the files on your USB or SD card.

*If you select a photo or video from "Files," it will play all of that file type on your drive, but it will not play **everything** on the drive.*

The best practice is to use the Movie option for videos and Photo option for still images.

To loop your file(s):

While your media is playing, on the remote, hit the "Repeat" button.

It will cycle through several options at the top of the screen:

"Repeat All" - all photos or videos will play on an endless loop.

"Repeat One" - repeat a single photo or video.

"Repeat Random" - repeats your files in a random order.

"Play One Once" - plays the current file once.

"Play All Once" - plays all your files one time.

In all likelihood, "Repeat All" should suffice for the majority of situations, including repeating a single file.